

ReadMe First – NDOR File Locations

PURPOSE:

To provide instructions to download and configure NDOR's MicroStation and Geopak standards. These instructions are for the initial download and configuration. Old files may need to be removed or overwritten if this is not the initial download and configuration.

INSTRUCTIONS:

1. On the NDOR Web page (<http://www.transportation.nebraska.gov/roadway-design/downloads.htm>) navigate to the section where it says to CLICK HERE to Download ALL MicroStation SS3 Standards.
2. Click on the link to save the file **allmicrostationss3.exe**.
3. Unzip the **allmicrostationss3.exe** file to C:\. The executable file will create the following path: c:\ndor\users\ndor_civil\microstation\v8\ and the files will be extracted to these folders. The configuration file (cfg) for MicroStation & Geopak (**NDOR_OpenRoads.cfg**) will be placed in the c:\ndor\ folder.
4. Move the **NDOR_OpenRoads.cfg** to: c:\(your install location for MicroStation or GEOPAK)\config\appl\ folder. For example, NDOR's install path would be c: C:\Program Files (x86)\Bentley\PowerGEOPAK V8i (SELECTSeries 4)\PowerGEOPAK\config\appl
5. On the NDOR Web page navigate to the section where it says to CLICK HERE to Download ALLGEOPAK SS4 Standards.
6. Click on the link to save the file **allgeopakss4.exe**.
7. Unzip the **allgeopakss4.exe** file to the c:\ndor\users\ndor_civil\ folder. The Geopak files will extract to the c:\ndor\users\ndor_civil\OpenRoads\ folder.

NOTE: When first starting MicroStation/GEOPAK, after running the executable files, make sure you select the user workspace called **NDOR_Consultant**.

NOTE: When extracting **allmicrostationss3.exe** it will create additional folders under the c:\ndor\users\ndor_civil\microstation\v8 folder.

NOTE: When extracting **allgeopakss4.exe** it will create additional folders under the c:\ndor\users\ndor_civil\OpenRoads\ folder.

NOTE: The one configuration file (**NDOR_OpenRoads.cfg**) should work for Microstation, Layered Products, or Power GEOPAK.